


## SecurCAM WIFI TOTALLY WIRELESS CAMERA WITH INBUILT BATTERY




### INSTRUCTION MANUAL

#### PACKING LIST

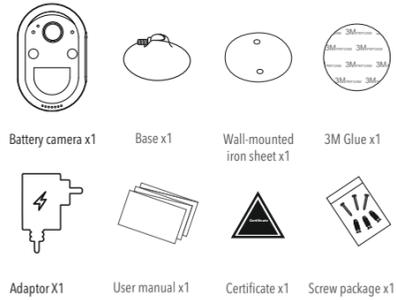

#### INTERFACE DESCRIPTION

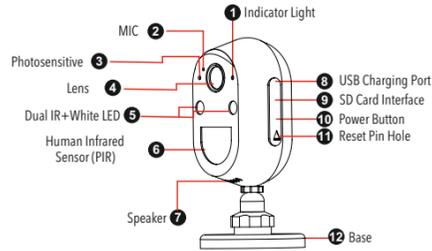

#### LED INDICATIONS :

- Green & Red LED always on: The camera is being previewed remotely.
- Green LED always on: The camera is turned on or in wake-up mode.
- Green LED flashes continuously: The camera is upgrading.
- Green LED flashes continuously but slowly: The camera is charging.
- Red LED flashes quickly three times: The camera is turned off.
- Red LED flashes fast continuously: Matching code
- Red LED flashes continuously but slowly: The camera is connecting to the Internet.
- Red LED is always on: The camera's battery is low.
- The traffic LED is always off: The camera is on standby.


#### BUTTON OPERATION:

- Turn ON - To turn on the camera, we need to hold the ON/OFF button for 3 seconds. The GREEN LED will turn ON.
- Turn OFF- To turn off the camera, we need to hold the ON/OFF button for 3 seconds. The RED LED will blink quickly 3 times.
- To reset the camera we need to long press the reset button for 5 seconds.

#### CONNECTING MODES

The camera supports 3 connecting modes:


1. Remote view by connecting the router

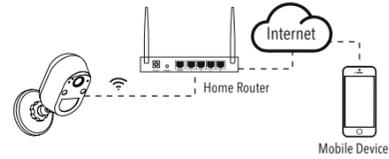

2. Direct connection through mobile phone



3. Pair to wireless NVR (WiFi/4G Base station, WNVR, Tablet)

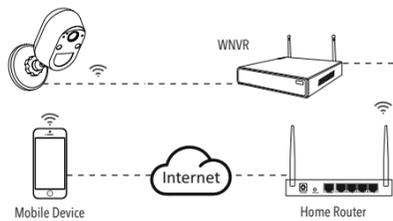


When viewing the camera remotely, the camera Wi-Fi should be connected to the router. The video is stored on the camera's SD card or cloud. When using the local direct connecting mode, the Wi-Fi of your mobile phone should be connected to the camera, and the video can only be stored on the camera's SD card. When working by pairing the camera to the wireless NVR (network video recorder), the video is stored on the NVR, and the mobile phone can be used remotely to view and set up the camera through the wireless NVR.

#### SETUP AND INSTALLATION

##### Boot up

When viewing the camera remotely by connecting to the router and following the direct connection method, please boot the device. When pairing the camera to the wireless NVR, please make sure that the memory (SD card, HDD, etc.) of the wireless NVR is ready. Please press the button for 2 seconds to turn ON the battery camera. If the camera cannot be turned ON, please plug in the charging power cord, and the camera will turn ON automatically.

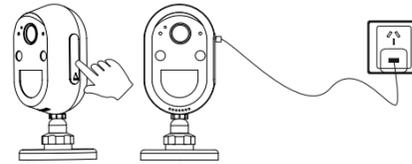

##### App Installation


Download the 'Halonix SecurCAM' App from Apple App store or Google Play store to your smartphone or tablet.

##### Account Registration

For new users, tap on 'Register' button and use Email ID or Mobile number to register. Once successfully registered, proceed to Login screen.

#### Account Login

Login with the registered mobile number or Email ID, enter password, and click the 'Confirm' button.

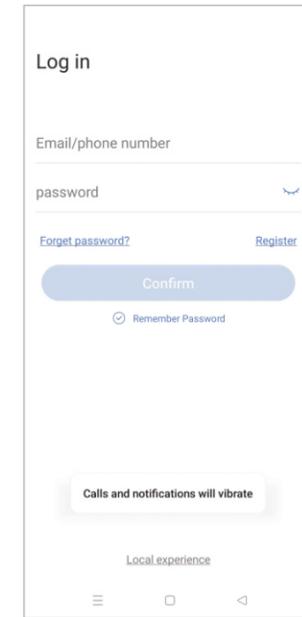


#### Add Camera to APP

**Method 1:** Scan the QR code on the camera when the Halonix SecurCAM is configured by connecting to the network and local direct way.

1. Keep your mobile phone and the camera near the router.

2. After the Halonix SecurCAM is turned ON, you will hear a voice prompt: "start configuration mode", and the red LED will start flashing. (If the red LED does not flash, press the RESET button on the camera for 8 seconds. The camera will be reset to factory default settings after the voice prompt "restore battery setting; the camera will then restart automatically.")

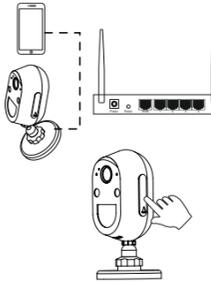

3. Open the APP and click on the '+' in the upper right corner to enter the scan code interface.


4. Scan the QR code on the device.



5. On the search device page, click 'Add'.




6. If the device indicator is not flashing, reset the device and wait for the device indicator to flash & proceed to the next step.

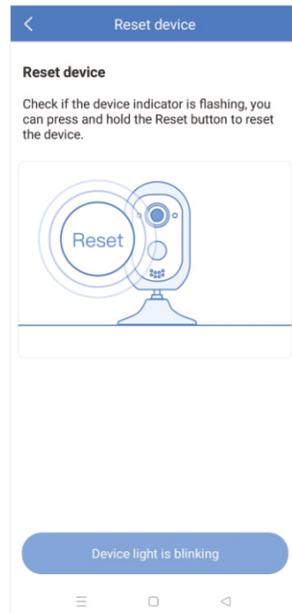

#### Adding Camera with Remote View Option

1. Click 'Remote View'. Choose the Wi-Fi device that needs to be connected with. Enter the password and proceed to the next step.

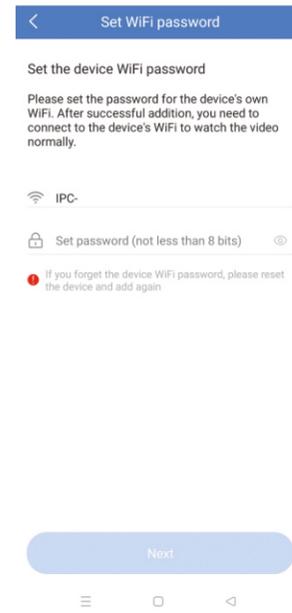


2. Use the camera to scan the QR code on mobile phone as shown in the figure. Proceed to the next step after hearing the prompt tone or checking the LED status.




7. To view and use with Wi-Fi or other networks, please select "Remote View". If there is no network, you can connect to the camera with Direct Connection method with both the devices in close vicinity.

3. After the network configuration is successful, set the name and password for the device to add it successfully.

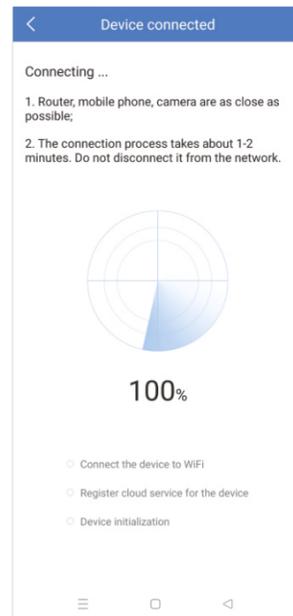

### Adding Camera with Direct Connection


1. Click "direct connection". Set a password for the camera Wi-Fi and proceed to the next step.

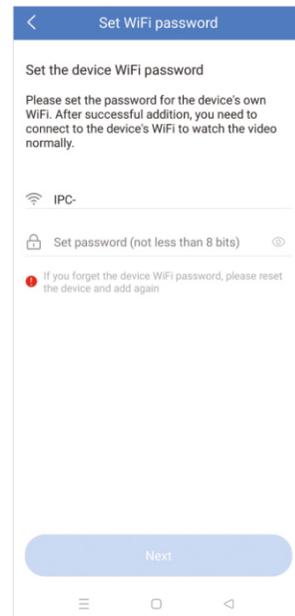


2. Use the camera to scan the QR code on the mobile phone (see figure). Proceed to the next step after hearing the prompt or checking the LED status.



3. Return to APP after connecting the camera with its Wi-Fi.

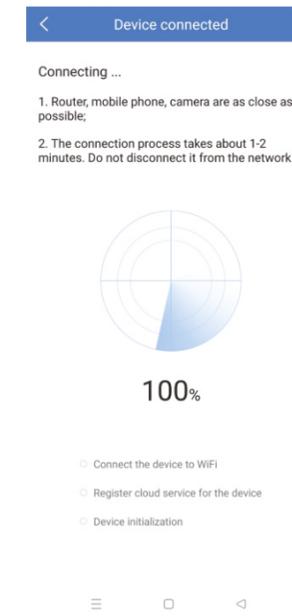

4. Set the name and password for the device. Then add it to the device list.

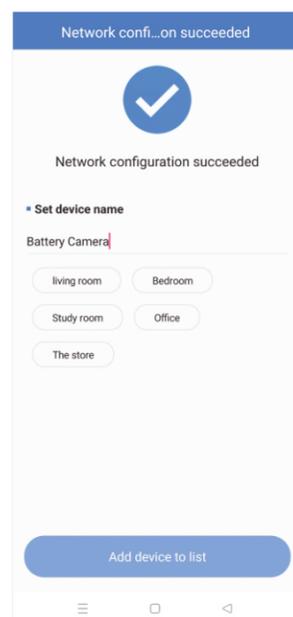

**Method 2:** To use the camera with the wireless NVR, turn on the wireless NVR and connect it to the Internet. Add the wireless NVR by scanning the ID QR code on the body of the NVR or the APP. By doing this, you can check the Halonix SecurCAM on the APP.

1. When the WNVR is powered ON, connect the WLAN network to the router which is already connected to the Internet.

2. Open the APP and click on the '+' on the upper right corner to enter the scan code page.



3. Scan the ID QR code on the wireless NVR body or the screen, and add the device according to the setting shown in the APP. The camera paired to the wireless NVR will be directly displayed in the device list.

### NOTIFICATION, PREVIEW AND PLAYBACK


1. Click the notification button to view the alarm information of the camera.
2. Click the corresponding play icon on the device list to access the preview page to view real-time video and have a voice intercom.



3. Click the playback or cloud icon to view the video stored on the device or cloud.
4. Tap the share icon to share the camera with others.

### INSTALLATION AND PLACEMENT


1. Place the Halonix SecurCAM on a desk or table, as shown.
2. Fix the Halonix SecurCAM on the wall or glass. Mount the iron sheet on the wall with a 3M adhesive tape (for smooth surfaces such as glass) or screw it onto the wall. Align and fix the magnetic base of the Halonix SecurCAM to the iron sheet and adjust the angle.

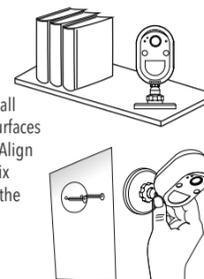

### CHARGING INSTRUCTIONS

While in use, if the APP shows the low battery message or if the camera's low battery warning indicator is on, you need to charge the camera as shown in the figure.


1. Connect the USB power supply to the Halonix SecurCAM.
2. During charging, the green LED is always ON. It turns OFF after charging is completed.

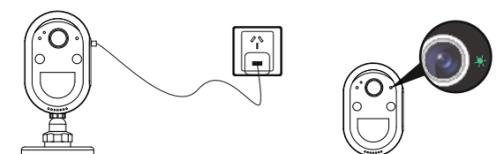

### CAMERA PAIRING TO WIRELESS NVR

In order to pair the Halonix SecurCAM with the wireless NVR, code matching is required.

1. Place the Halonix SecurCAM and the wireless NVR within 30 - 100 cm.

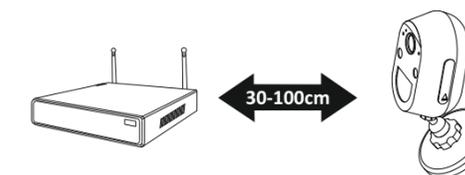

2. While the Halonix SecurCAM is turned ON, press and hold the 'RESET' button for 6 seconds.



3. When the indicator LED of Halonix SecurCAM turns red & starts flashing rapidly, the code matching mode is activated.



4. Open the WNVR's function of match code to add camera

### CORPORATE OFFICE

Halonix Technologies Pvt. Ltd.  
B - 31, Phase-2, Noida, (U.P.) - 201305. Tel: +91 - 120 - 4756100,  
Fax: +91 - 120 - 4756101

### REGIONAL OFFICES

**EAST**  
Halonix Technologies Pvt. Ltd.  
67B Ballygunge Circular Road, Ballygunge Park Tower, 9th Floor,  
Kolkata - 700019, Tel: +91 - 033 - 40081849

### WEST

Halonix Technologies Pvt. Ltd.  
The Affairs Office No. 1402, 14th floor  
Plot No. 9, Sector 17, Sanpada Navi Mumbai, Thane - 400705  
Tel: +91 - 022 - 35120050

### SOUTH

Halonix Technologies Pvt. Ltd.  
No.6, "Legacy" 1st Floor, Convent Road, Richmond Town  
Bengaluru - 560025, Tel: +91 - 080 - 41125296